



Instructions and important warning signs for the lantern

Thank you and congratulations for choosing an individual light object from Lineamare.

You have thus acquired a handmade product, which was produced in small handicraft companies from Germany. Each lantern is unique and can therefore differ slightly in its structure, surface, colours and workmanship as well as its weight and dimensions.

Please read the following instructions carefully before starting the first operation and observe them in principle whenever you use your lantern.

The lantern should primarily be equipped with LED candles (Important: Please observe the safety instructions of the respective manufacturer) - alternatively with 1-wick wax candles - which are neither part of the product nor included in the scope of delivery.

Important safety & warning signs

- ⚠ **Attention - Important - your safety is important to us** - we recommend the exclusive use of LED candles when using the lantern. This applies in particular to yachts or areas that are not constantly monitored, as well as to foiled lanterns. **The use of wax candles in these areas and cases is therefore at your own risk.**
- ⚠ **Caution** - This lantern, as well as its packaging, are not toys and should therefore be kept away from children as well as from pets. There may be a choking hazard.
- ⚠ **Caution** - Always keep children and pets away from the lantern if there is a wax candle burning and the lantern has not been completely cooled down.
- ⚠ **Warning the danger of burns** - The top (lids, handles) as well as the outer sides (metal parts, glass surfaces) of the lantern, can become hot during longer burning time of used wax candles.
- ⚠ **Warning fire hazard** - Never allow the candles to burn down completely. Replace the installed wax candles at the latest if their height (measured from the candle bottom to the bottom of the flame) is still 5 cm.
- ⚠ **Warning fire hazard** - Neither with burning candle, nor as long as the candle is hot: No combustible objects, such as decorative items, may be placed at the same time inside the lantern - nor may the lantern be fully or partially covered.
- ⚠ **Warning** - Never leave the lantern unattended as long as it burns a wax candle. Extinguish lit wax candles first, before removing from the lantern.

Notes on positioning/placement

- Always place the lantern only on flat surfaces, which are also sufficiently stable, secured and fireproof at the same time.
- Always ensure a sufficient distance from the lantern to other burning or combustible objects.
- When used indoors, generally pay attention to adequate oxygen supply.
- Move, tilt or wear the lantern only if a wax candle is not lit in it.



- In the event of storms, thunderstorms, frost or other bad weather conditions, as well as on yachts on the way (boating), ensure or protect the lantern sufficiently - and extinguish any lit wax candles (which is according to our advices above, on your own risk).
- In case of longer absence, we recommend protecting the completely cooled lantern from environmental influences (storms, salt water, sun) and to stow or store it in a suitable way.

Operating instructions

- Non-burning and cooled candles are placed or taken out of the door, by gently turning the door handle 90 degrees to the right to open it - and then gently turn the door handle back to the left after closing the door.
- Once you have lit the wax candle, please close the door of the lantern immediately.
- Always use only one wax candle per lantern with only one wick, which you place in the centre of the provided opening in the base plate.
- The height of any wax candle used, may not be higher than 1/4 the height of the lantern in which the candle is placed.
- Only use candles that are not thicker than the opening provided in the bottom of the lantern and place them inside this opening. To avoid running wax, you can place a flat, matching and fireproof shell under the candle on the lower base plate (below the opening).
- To extinguish wax candles do not simply blow them out but use a suitable candle extinguisher (candlesnuffer).

Care instructions

Warning danger of burns – Please always make sure that the lantern is sufficiently cooled after using wax candles when cleaning or maintaining the lantern.

- The surface of the lantern is made of powder-coated aluminum and chrome-plated stainless steel – in the case of foiled lanterns, additionally with a high-quality special film for outdoor use. The care should therefore be carried out with suitable and gentle cleaners.
- The handle made of genuine leather should be treated regularly with a good and preferably colourless leather care product.
- The glass surfaces are best cleaned with a standard glass cleaner. Please make sure that the glass surfaces have cooled sufficiently after using a wax candle.
- Those who do not like the natural teak patina on the outside of the lantern can oiling the wood - but also only on the outside - regularly.
- In general, do not use any detergent or other combustible detergents, as well as scratching sponges or other hard objects, to clean or maintain the lantern.